




NOTES:  
1. All dimensions are to be checked on site before the commencement of work. Any discrepancies are to be reported to the Architect & Engineer immediately.  
2. The drawing is to be used in conjunction with all relevant Engineering and Survey Engineering drawings and specifications.

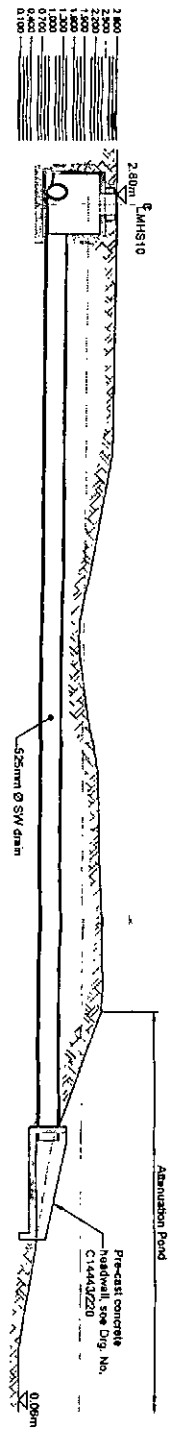


SECTION A-A  
Scale 1: 100

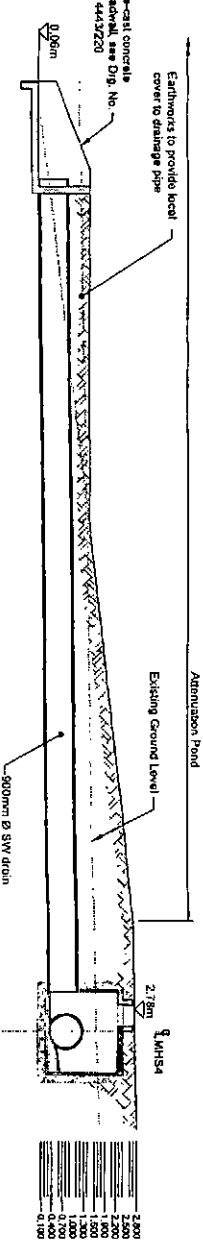

SECTION B-B  
Scale 1: 100

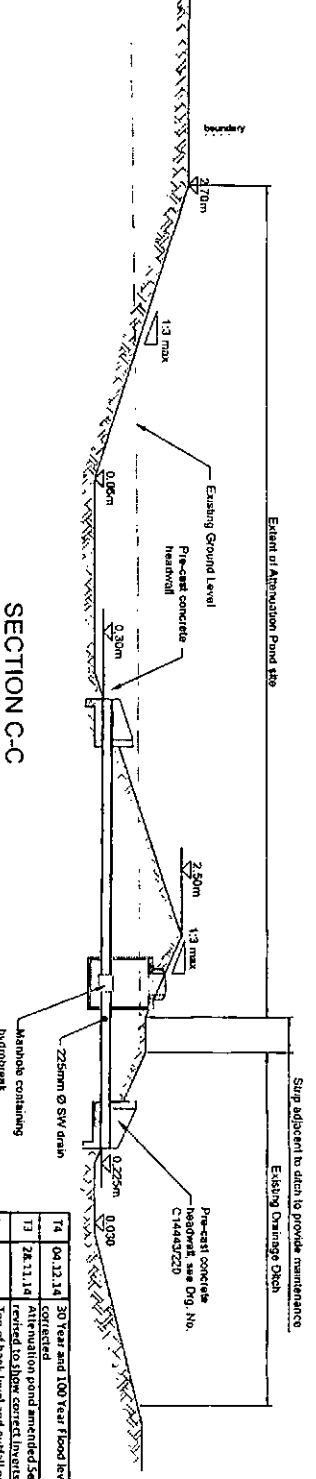

SECTION C-C  
Scale 1: 100

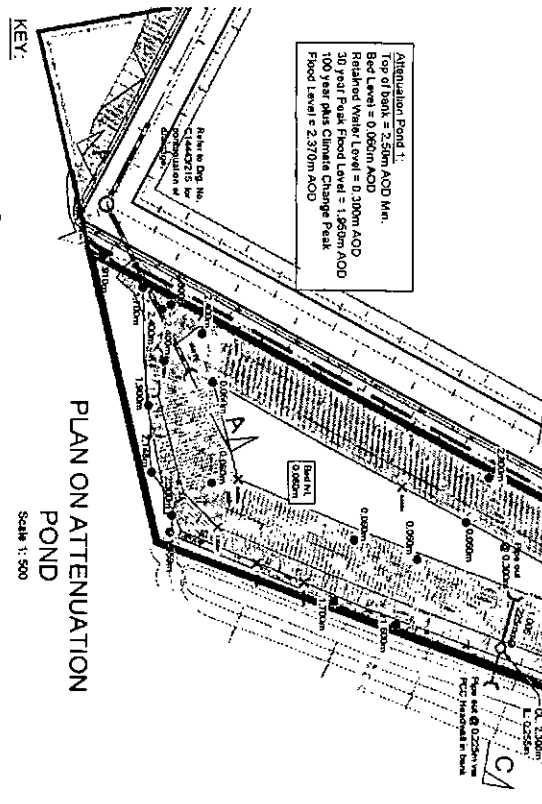

PLAN ON ATTENUATION POND  
Scale 1: 500

