

Maintenance Schedule	Required Action	Frequency
Regular Maintenance	Remove sediment and debris from silt trap chambers, channel drains and inlet chambers	6 monthly
	Litter and debris removal – catch pits, flow control manhole	Monthly or as required
	Surface and Foul water pipe work – jetting / rodding	Every 2 years or as required
	Manage other vegetation and remove nuisance plants – aesthetics	As required
	Visual Inspection of permeable parking for defects and settlement	Annually
	Sweeping/brushing of permeable parking	Twice Annually
Corrective Maintenance	Remove debris/blockages to silt traps / channel drains	As required
	Repairs to access chambers / manhole covers	As required
	Replace any broken permeable blocks/surface, remedial works to any depressions or rutting	As required
	Inspect inlet, outlet from downpipe and gullies for blockages, standing water and clear	As required

Indicative Schedule of Maintenance for the Proposed Drainage System