

NOTES:


Dimensions to be checked on site before commencing work.
Any discrepancies shall be reported to the architect immediately.

Do not scale from these drawings except for planning purposes.


Use figured dimensions only.

Where applicable this drawing is to be read in conjunction with other consultants' drawings.


All drawings to be read in conjunction with specification and all other drawings including structural engineer and mechanical and electrical drawings / specification

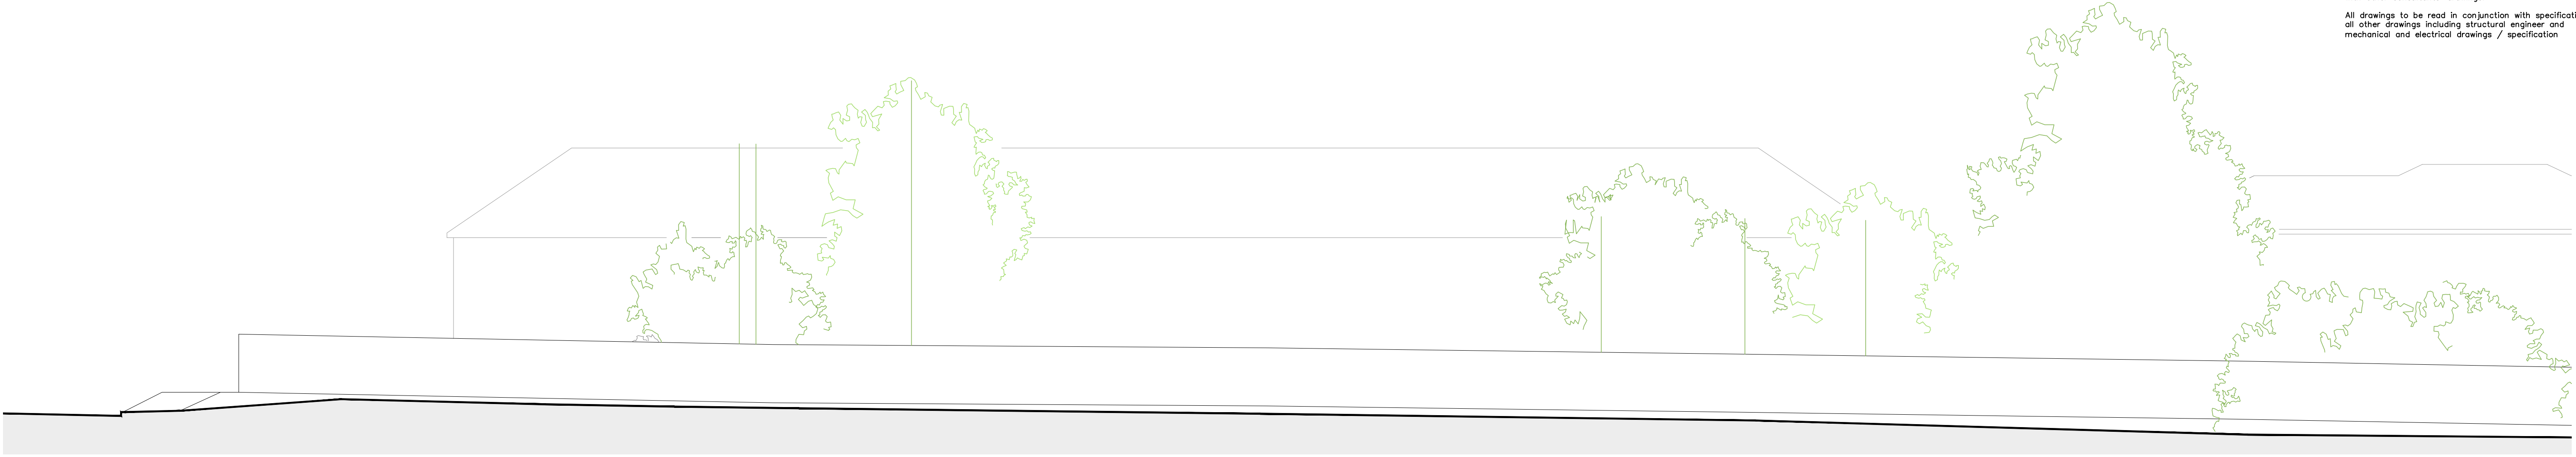


SECTION A-A
LONG SECTION 1:100

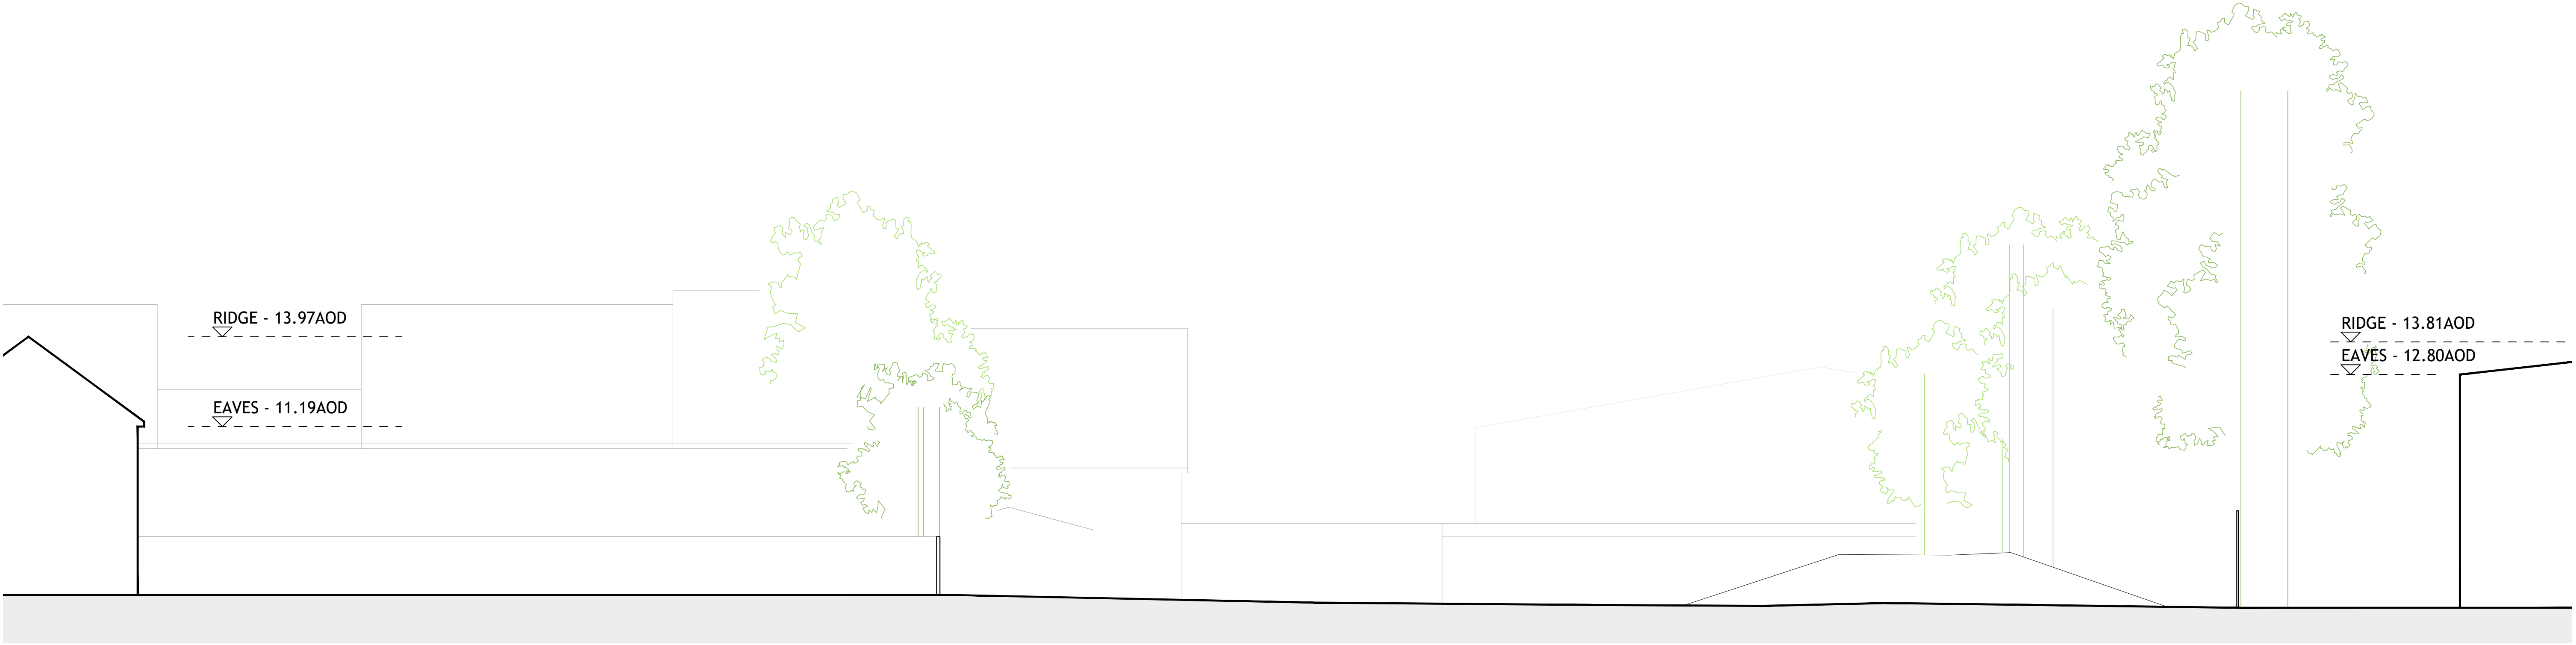

SECTION B-B
CROSS SECTION 1:100

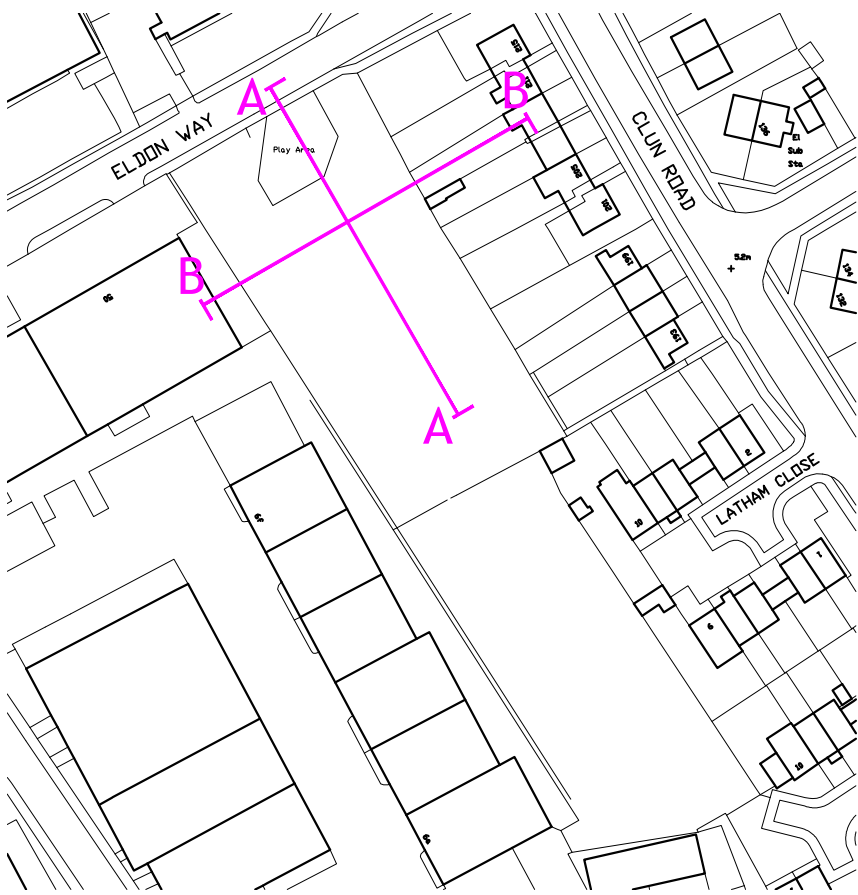

REFERENCE PLAN
[not to scale]

 

DRAWING	DRAWING NO
EXISTING SITE SECTIONS	20031-03
SCALE	
as noted @ A1	
DATE	
OCT 2021	
REVISION	
*	

