

**STONE CONSULTING
ENGINEERS LTD.**

**CONSULTING CIVIL, STRUCTURAL AND
FOUNDATION ENGINEERS**

Hundred Acres House
Wickham
Hampshire
PO17 4ED

117 Barrack Lane
Aldwick
West Sussex
PO21 4ED

JOB NO.: 1904

Date: Mar 2019

QA INFORMATION

CLIENT:	Lynes
JOB ID:	Little Glebe
SCOPE OF WORK:	Soakaway Design
DESIGN CODES AND REFERENCES:	BRE 365
SOFTWARE:	MS EXCEL
SUB-SOIL/ FOUNDATION DATA:	N/A

MATERIAL DATA

CONCRETE:	
REINFORCEMENT:	
STEELWORK:	
TIMBER:	
OTHER:	
	Field observation by others

OTHER INFORMATION / NOTES

Rev A First issue

STONE CONSULTING ENGINEERS LTD

Project:	Little Glebe	Date:	Mar 2019	Made by:	KS	Sheet No.	1
CALCULATION SHEET		Job No.	1904	Chkd:	-	Rev.	A


SUMMARY:

The calculation is based on a 100 year return period with a 40% allowance for Climate Change.

Soakaways located to the front and rear of the property are required to attenuate and discharge surface water.

The infiltration rate has been derived from infiltration testing at site in general accordance with BRE 365.

The site is confirmed suitable for the use of soakaways.

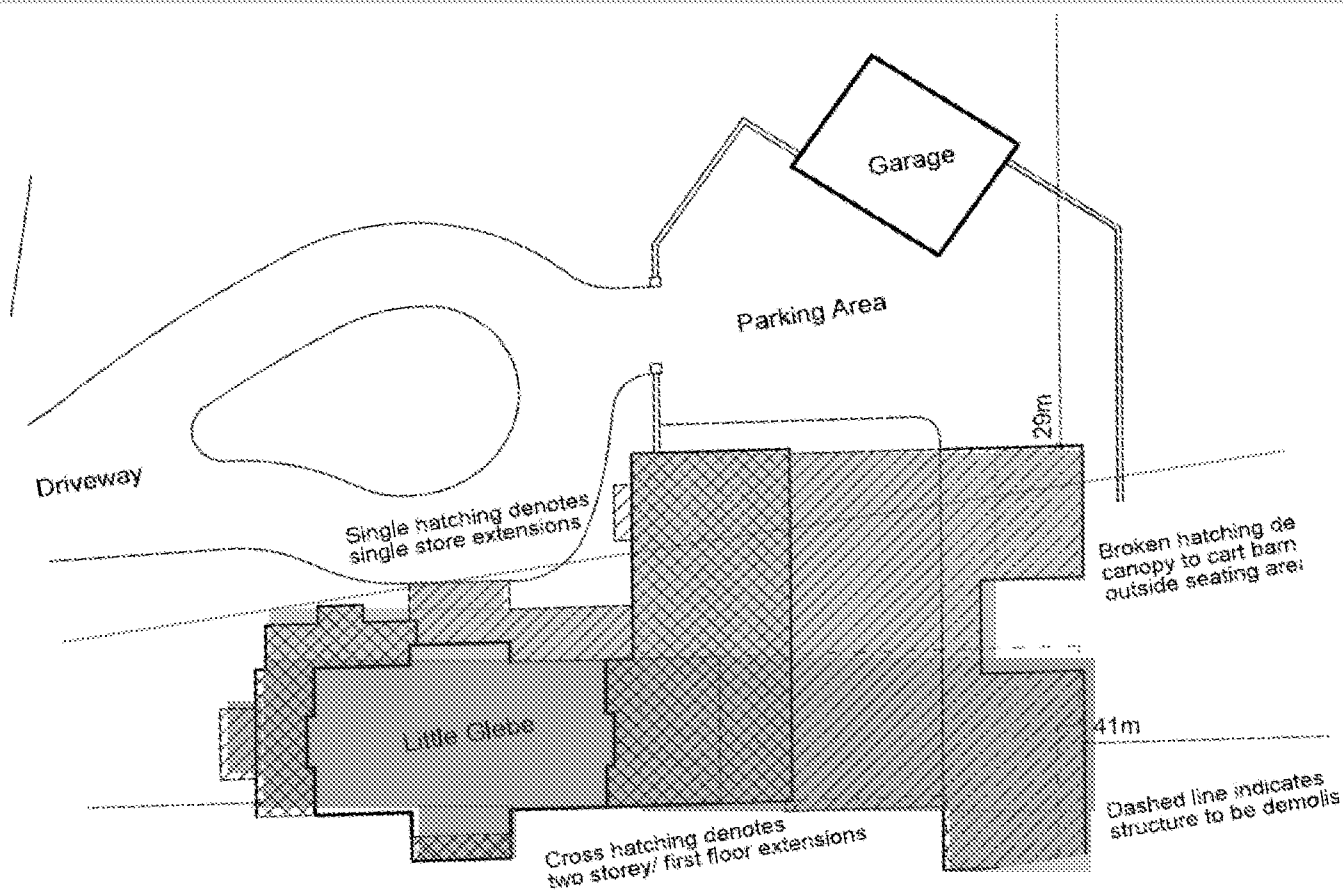

Roof areas draining into soakaways to

Front (blue) = 206.00 m2

Rear (red) = 255.00 m2

STONE CONSULTING ENGINEERS LTD

Project: Little Glebe	Date: Mar 2019	Made by: KS	Sheet No. 2
CALCULATION SHEET	JobNo. 1904	Chkd: -	Rev. A

SOAKAWAY DESIGN TO BRE(1991)

SOAKAWAY DETAILS

Ring		Pit/crates	
Soakaway size, Ds =	2.50 m	Length =	3 m
Depth of below invert, Hs =	1.50 m	Width =	4.5 m
		Depth below invert =	1.2 m
Free volume, S =	7.36 m ³		= 16.20 m ³
Rubble filled volume, S' =	2.21 m ³		= 5.35 m ³

INITIAL SOAKAWAY SIZING

Drained area to soakaway = 255.00 m²
 Climate change allowance = 40 %

INFLOW

Inflow, I = (run off area) x (design rainfall)
 = A x (M10-D)

DESIGN RAINFALL

Return period = 100 yrs
 Ratio of 60 min to 2-Day rainfalls of 5 year return period, r = 0.35 BRE(1991) Fig 1.

M5 rainfalls are calculated from table 1 (BRE 365) using Z1 factor

Storm						100 yr + 40%	
duration (mins)	Z1	M5-D (mm)	Z2 M10 (cor. Fac)	M10-D* rainfall	Z2 M100 Design	rainfall	
5	0.38	7.5	1.19	12.50	1.84	19.32	
10	0.53	10.5	1.22	17.93	1.92	28.22	
15	0.64	12.7	1.23	21.87	1.96	34.85	
30	0.81	16.1	1.22	27.50	2.00	45.08	
60	1.00	20	1.24	34.72	2.03	56.84	
120	1.21	24.1	1.24	41.84	2.01	67.82	
240	1.45	28.9	1.22	49.36	1.97	79.71	
360	1.61	32.1	1.21	54.38	1.94	87.18	
600	1.80	35.9	1.2	60.31	1.90	95.49	
1440	2.24	44.8	1.18	74.01	1.81	113.52	

* including 40% for climate change

OUTFLOW

Soil infiltration rate, f = 3.23E-05 m/sec
 effective storage depth, a(50) = H x .5 = 0.75 m (ring)
 Outflow /sec = 3.142 x Dia x a(50) = 1.90E-04 m3/sec (ring)

effective storage depth, a(50) = H x .5 = 0.6 m (pit)
 Outflow /sec = 2(L + W) x a(50) x f = 2.90E-04 m3/sec (pit)

STONE CONSULTING ENGINEERS LTD

Project: Little Glebe	Date: Mar 2019	Made by: KS	Sheet No. 3
CALCULATION SHEET	JobNo. 1904	Chkd: -	Rev. A

STORAGE CAPACITY

$$\text{Storage capacity, } S = \text{Inflow} - \text{Outflow}$$

$$= I - O = [A \times (M10-D)] - O$$

Ring soakaway				Pit/crates soakaway		
Storm duration (mins)	Inflow S(1) m³	Outflow Max m³	Required capacity m³	Outflow Max m³	Required capacity m³	
5	4.93	0.06	4.87	0.09	4.84	
10	7.20	0.11	7.08	0.17	7.02	
15	8.89	0.17	8.72	0.26	8.63	
30	11.50	0.34	11.15	0.52	10.97	
60	14.49	0.68	13.81	1.05	13.45	
120	17.29	1.37	15.93	2.09	15.20	
240	20.33	2.74	17.59	4.18	16.14	
360	22.23	4.10	18.13	6.27	15.96	
600	24.35	6.84	17.51	10.45	13.90	
1440	28.95	10.42	18.53	25.08	3.86	
Max required capacity =			18.13	=		16.14
Max ring capacity =			7.36	Free volume =	16.20	OK
Rubble filled volume =			2.21	Rubble filled volume =	5.35	FAIL

Storage volume

Ring soakaway				Status
Diameter	2.50	m	Unfilled	FAIL
Depth below invert =	1.50	m	Filled	FAIL
Pit or trench				Status
Length =	3.00	m	Unfilled	OK
Width =	4.50	m	Filled	FAIL
Depth below invert =	1.2	m		

Select pit/crate soakaway


Discharge time

Unfilled pit	
Required soakaway storage volume =	3.86
50 outflow area =	9.00
Infiltration rate =	3.23E-05
Time for emptying soakaway to 50% volume	6.66E+03 sec
	1 hrs
	51 mins

STONE CONSULTING ENGINEERS LTD

Project: Little Glebe	Date: Mar 2019	Made by: KS	Sheet No. 4
CALCULATION SHEET	JobNo. 1904	Chkd: -	Rev. A

Soakaway performance

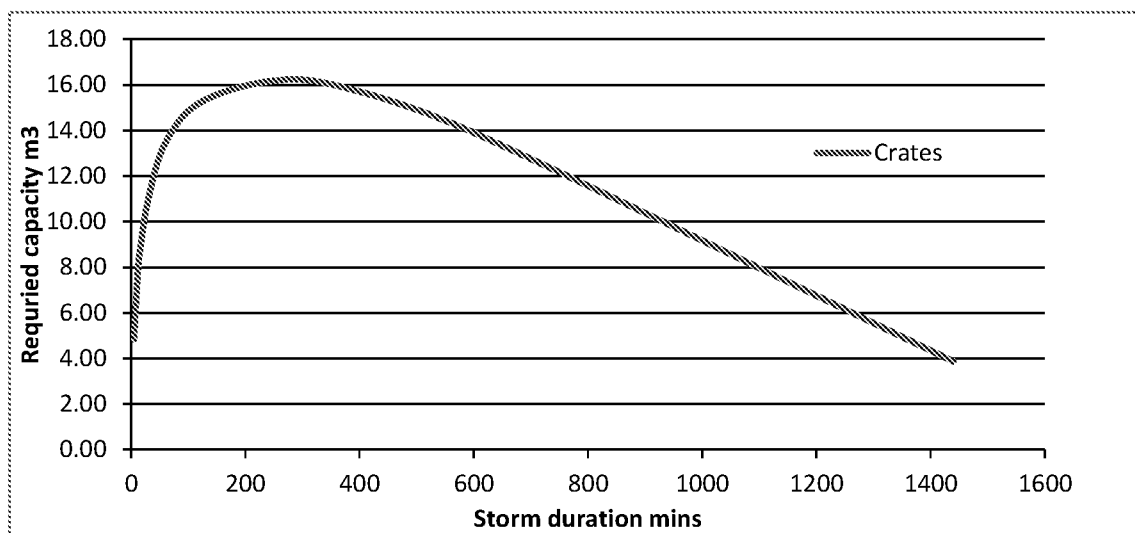

Estimation of infiltration rate

Site conditions : Permeable silty GRAVEL

Soakage test data

Test hole A

Depth of water at start of test = 0.5 m
 Length of pit = 1.5 m
 Width of pit = 0.4 m

Water level drop of 0.50 m in 100 mins
 Total volume out = 0.3 m³

Mean area sides = 0.95 m² (50% of water depth)
 Area base = 0.6 m²
 Total outflow area = 1.55 m²

Infiltration rate = **3.23E-05 m/sec**

Depth to water table

It should be noted that the water table was not encountered in a trial excavation to a depth of 2.5m.

SUMMARY:

The design indicates that a storage capacity of 16.6m³ is required for the maximum inflow into the front soakaway. This capacity can be provided by one or more soakaways.

For example

Single soakaway of 3 x 4.5 x 1.2m deep or

Two soakaways of 3 x 2.5 x 1.2m deep


Soakaways would be formed using Wavin AquaCell or similar crates of 1 x 0.5 x 0.4(high) installed in accordance with manufacturers recommendations.

STONE CONSULTING ENGINEERS LTD

Project: Little Glebe	Date: Mar 2019	Made by: KS	Sheet No. 5
CALCULATION SHEET	JobNo. 1904	Chkd: -	Rev. A

Typical installation procedure for AquaCell Eco (or similar) crated

1. Excavate the trench to the required depth ensuring that the plan area is slightly greater than that of the AquaCell units.
2. Lay 100mm bed of coarse sand or non angular granular material, level and compact.
3. Lay the geotextile over the base and up the sides of the trench.
4. Lay the AquaCell units parallel with each other. In multiple layer applications, wherever possible, continuous vertical joints should be avoided. AquaCell units can be laid in a 'brick bonded' formation (i.e. to overlap the joints below). For single layer applications use the AquaCell Clips and for multi layers use the AquaCell Clips and the AquaCell Shear Connectors (vertical rods).
5. Fix the Adaptors to the AquaCell units as required and connect pipework.
6. In order to prevent silt from entering the tank, clogging inlet pipework and reducing storage capacity, it is recommended that the Domestic Silt Trap (SLB300) or the standard Silt Trap (SLB600) is installed prior to the inlet pipework.
7. Wrap and overlap the geotextile covering the entire AquaCell structure.
8. Lay 100mm of coarse sand or non angular granular material between the trench walls and the AquaCell structure and compact.
9. Lay 100mm of coarse sand or non angular granular material over the geotextile and compact.
10. Backfill with suitable material.
11. Rainwater from roof areas may discharge directly into the soakaway but rainwater from car parks must discharge through a catchpit manhole and/or a petrol interceptor.

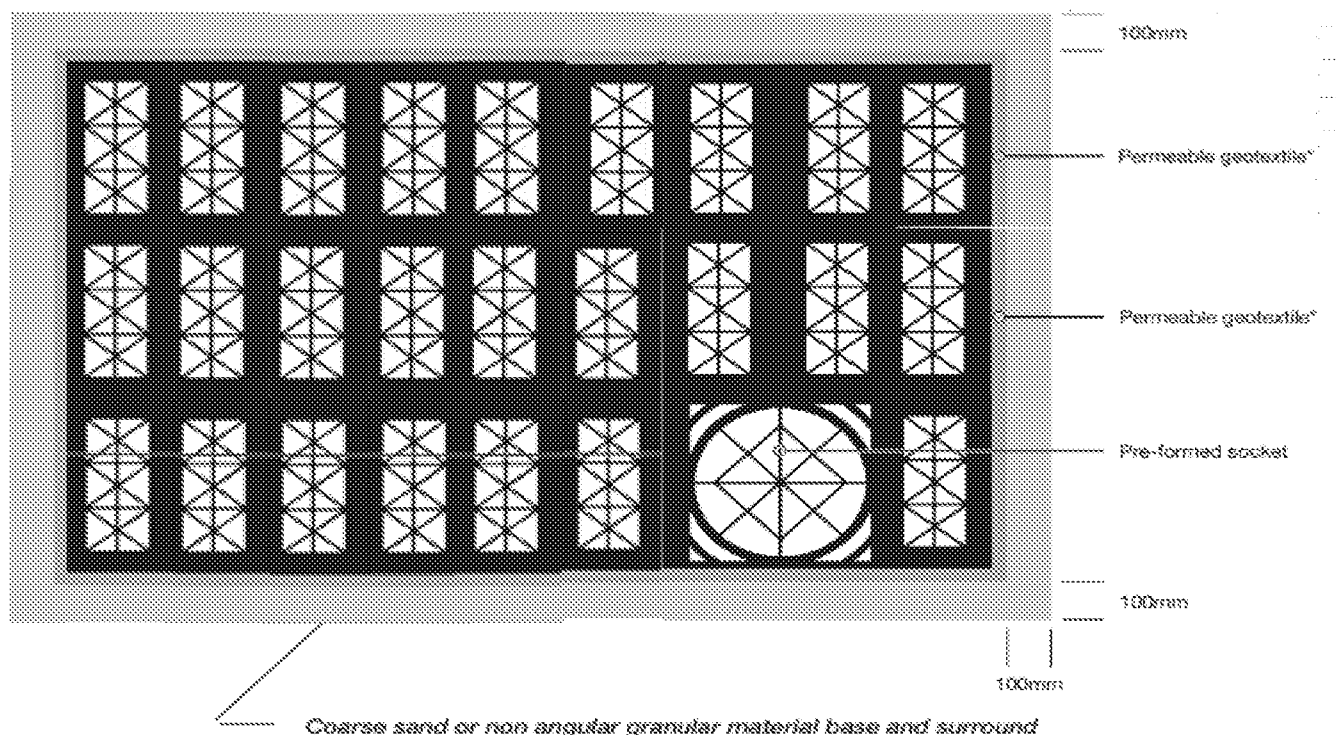

- Notes:**
1. Crates installed in 3 layers to give 1.2m depth below invert level
 2. Modular crate size 1m x 0.5 x 0.4m
 3. AquaCell Prime or similar product to be used in areas subject to traffic such as below driveways.
 4. Any arrangement of single or multiple soakaways to provide similar storage volume is satisfactory