



Installation Drawings

General Arrangement: Horizontal Installation

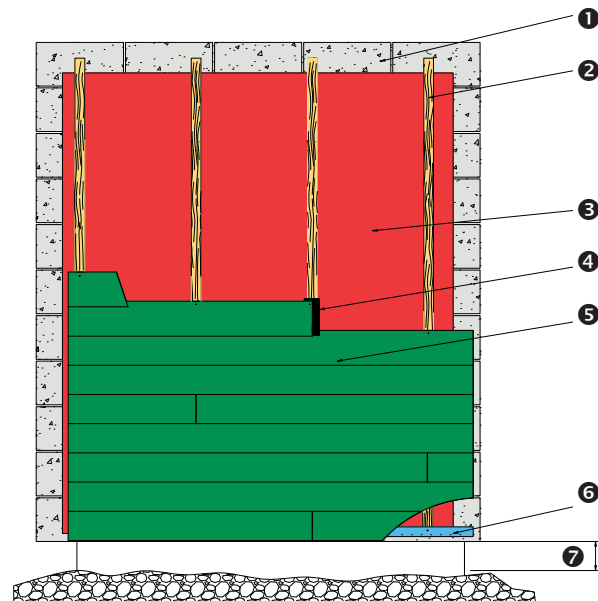


- ❶ Bricks / Masonry
- ❷ Vertically installed 50x50mm timber battens
- ❸ Breather membrane
- ❹ EPDM gasket at joint
- ❺ HardiePlank® cladding
- ❻ HardiePlank starter strip with ventilation
- ❼ 150mm min.

Ground Level–Ventilation Detail

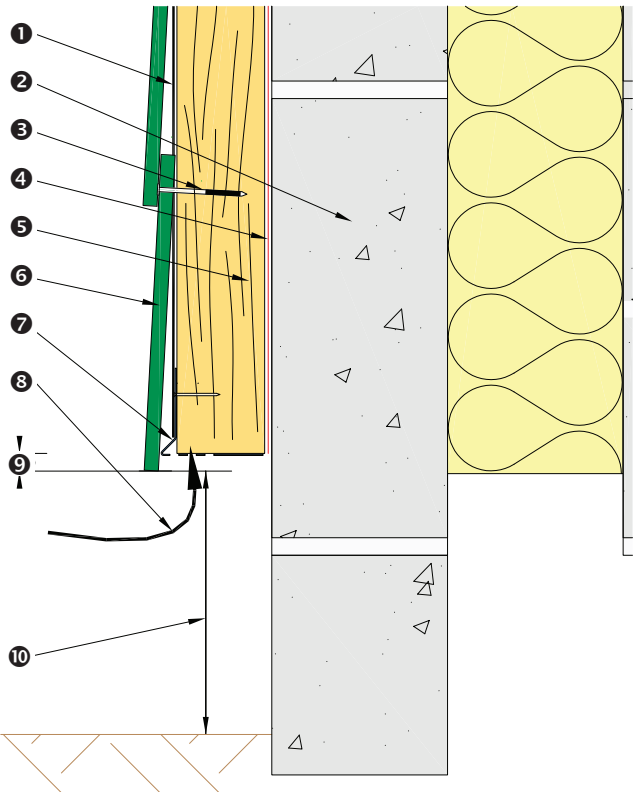


- 1 EPDM
- 2 Masonry
- 3 51 × 2.95mm fixing
- 4 Breather membrane
- 5 Timber battens 50 × 50mm
- 6 HardiePlank® cladding
- 7 HardiePlank starter strip with ventilation
- 8 Ventilation path
- 9 10mm drip detail
- 10 150mm min.

Top of Cladding–Ventilation Detail

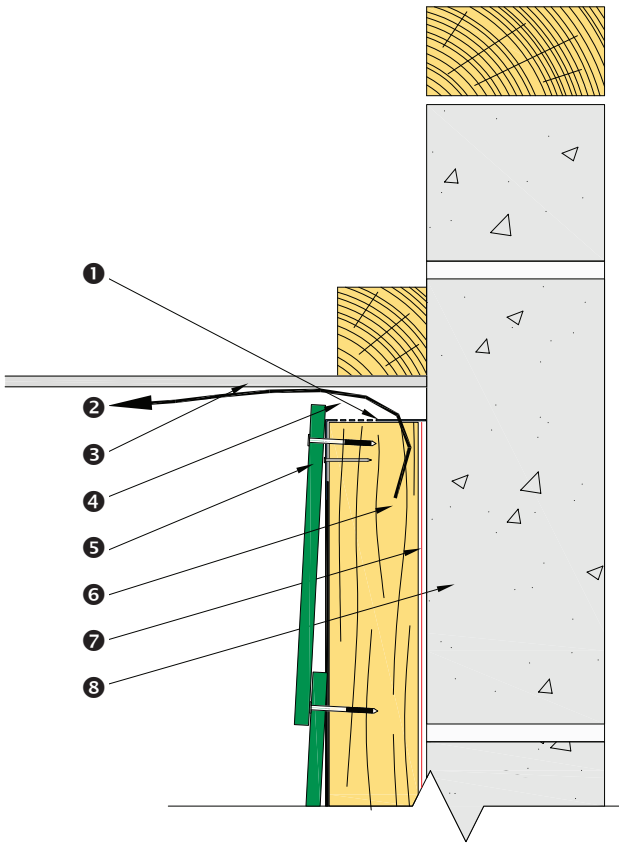


- 1 HardiePlank® ventilation strip
- 2 Ventilation path
- 3 Soffit board
- 4 10mm ventilation gap
- 5 HardiePlank cladding
- 6 50 × 50mm vertical timber framing batten
- 7 Breather membrane
- 8 Masonry

External Corner–HardieTrim® NT3®

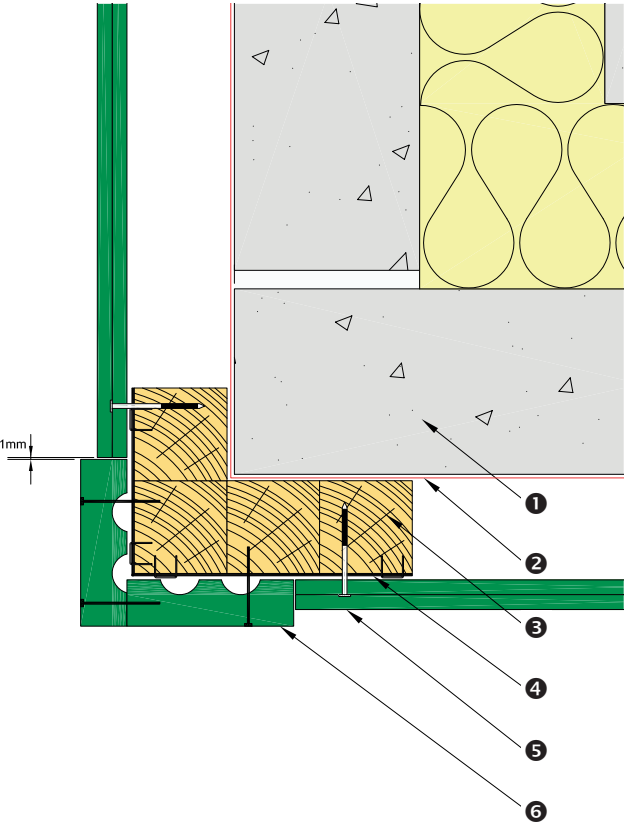


Internal Corner–HardieTrim® NT3®

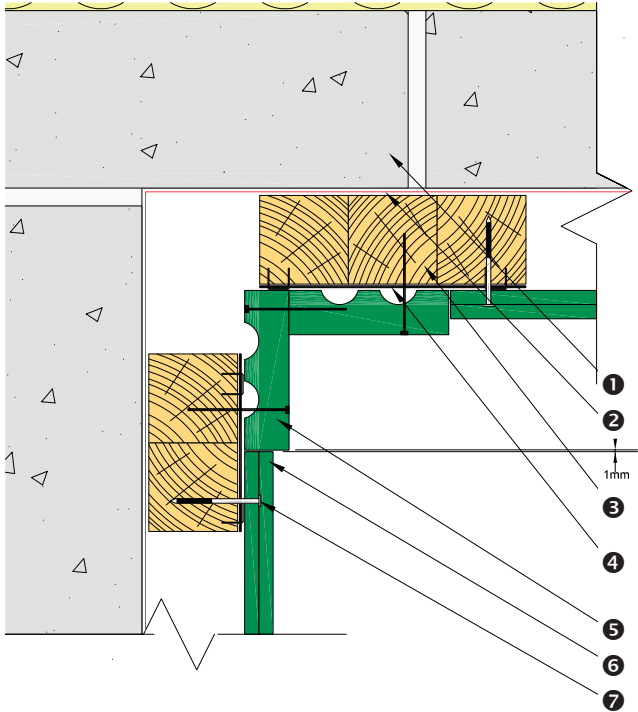


- 1 Masonry
- 2 Breather membrane
- 3 Timber battens 50 x 50mm
- 4 EPDM
- 5 HardieTrim® NT3® profile
- 6 HardiePlank® cladding
- 7 51 x 2.95mm fixing

External Corner–MetalTrim

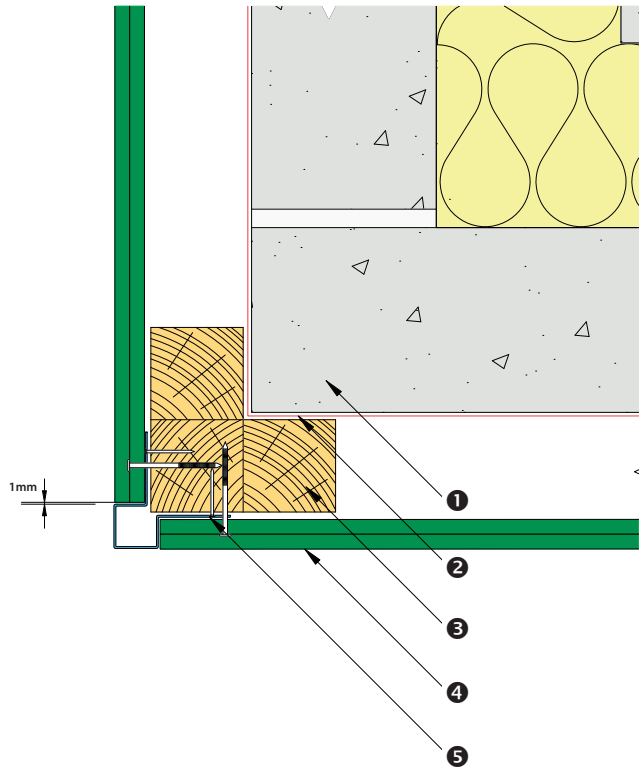


Internal Corner–MetalTrim

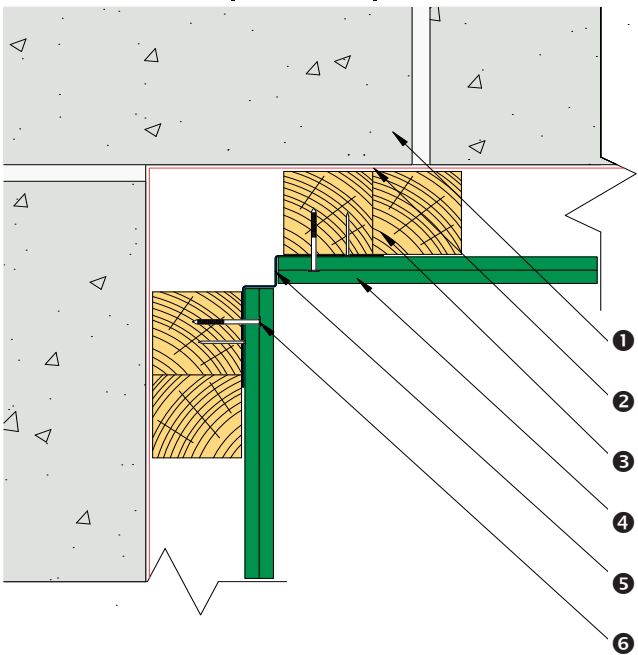


- ❶ Masonry
- ❷ Breather membrane
- ❸ Timber battens 50 × 50mm
- ❹ HardiePlank® cladding
- ❺ MetalTrim internal corner profile
- ❻ 51 × 2.95mm fixing

Gables

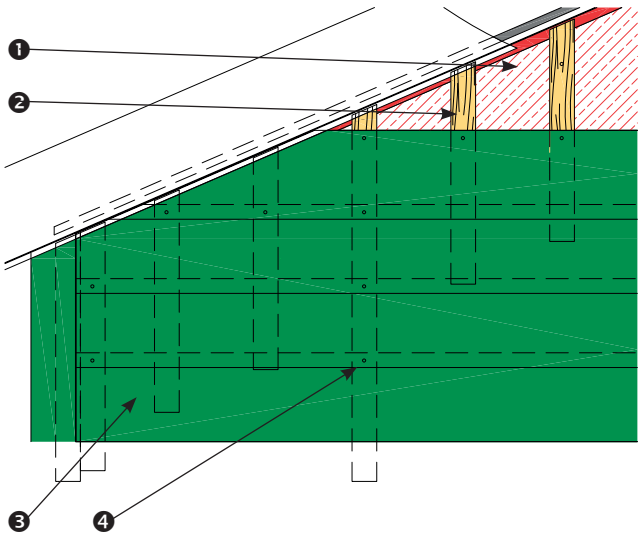


Brick Dado Detail

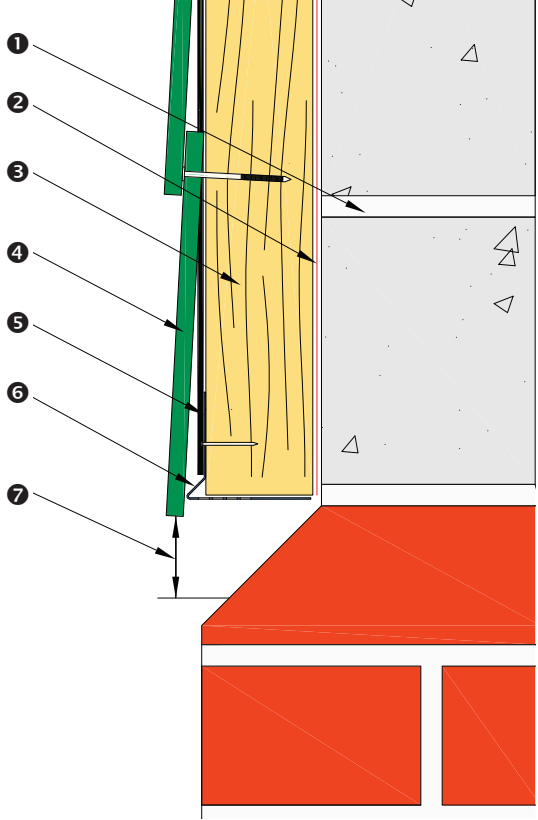

- 1 Breather membrane
- 2 Timber battens 50 × 50mm, 200mm centres
- 3 HardiePlank® cladding
- 4 50mm fixing nail





- 1 Masonry
- 2 Breather membrane
- 3 Timber battens 50 × 50mm
- 4 HardiePlank® cladding
- 5 EPDM
- 6 HardiePlank starter strip with ventilation
- 7 10mm drip detail

Expansion Gap

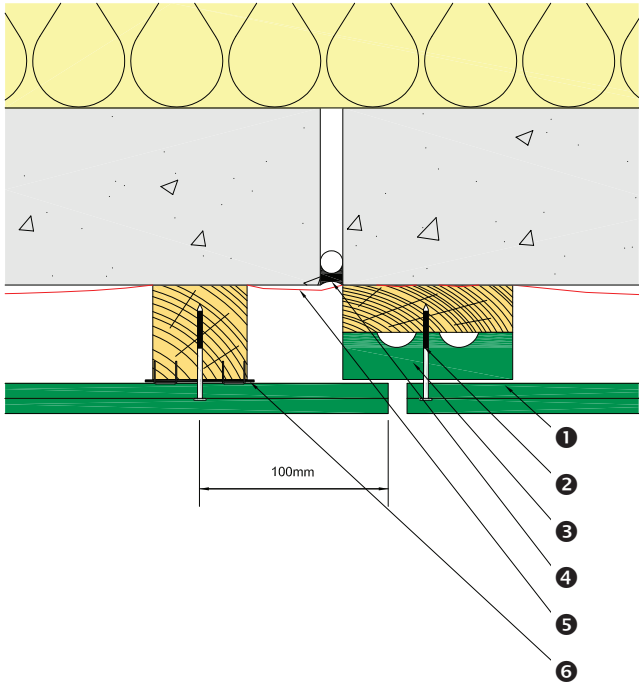

- 1 HardiePlank® cladding
- 2 51 x 2.95mm fixing
- 3 HardieTrim® NT3® profile
- 4 Expansion gap
- 5 Breather membrane
- 6 EPDM

Abutment to Render

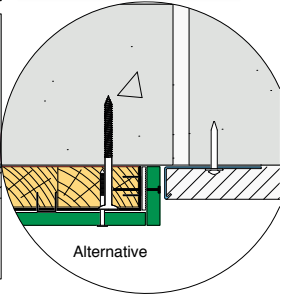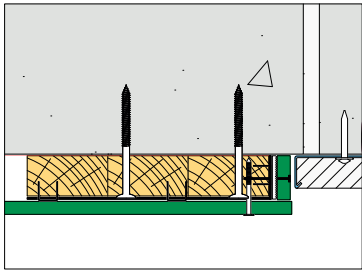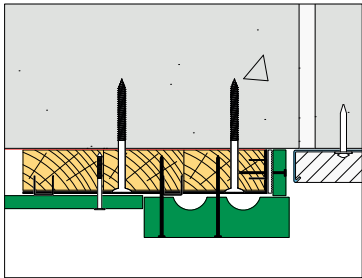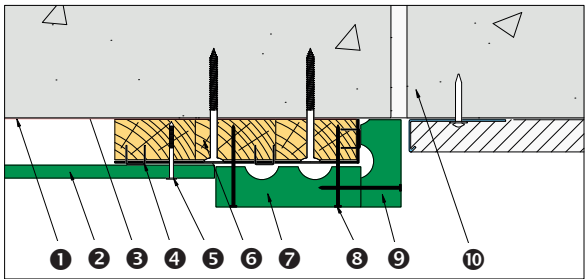


- 1 Breather membrane
- 2 HardiePlank® cladding
- 3 Concrete block
- 4 EPDM stapled to batten
- 5 51 x 2.95mm fixing
- 6 50 x 25mm timber
- 7 90 x 25mm HardieTrim® NT3® profile
- 8 51mm 16g fixing
- 9 HardieTrim NT3 profile cut to fit
- 10 Brickwork


Window Details: HardiePlank® On Edge




Reveal Detail

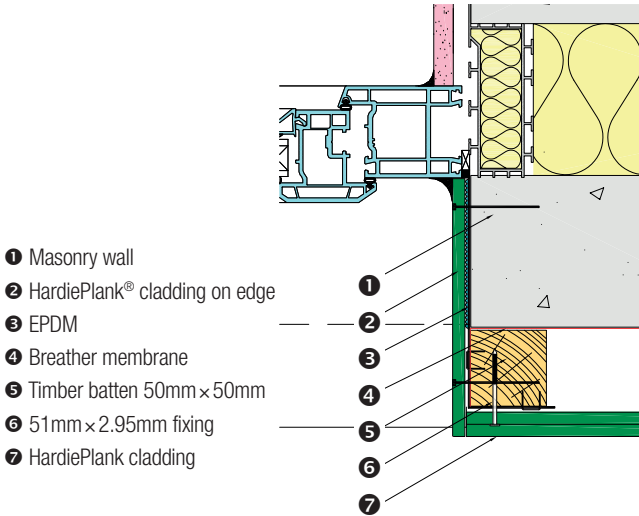

Window Head

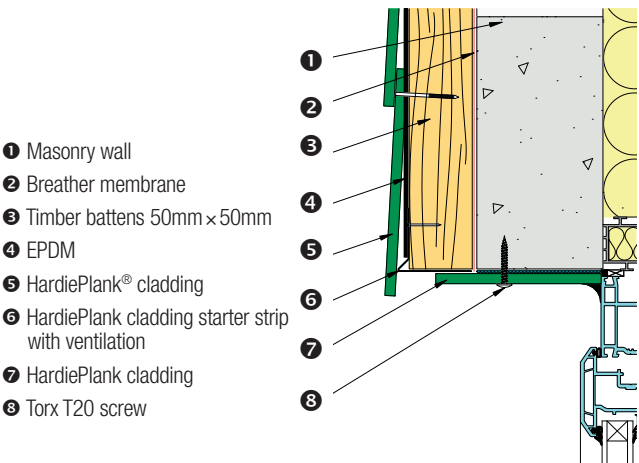


Window Cill

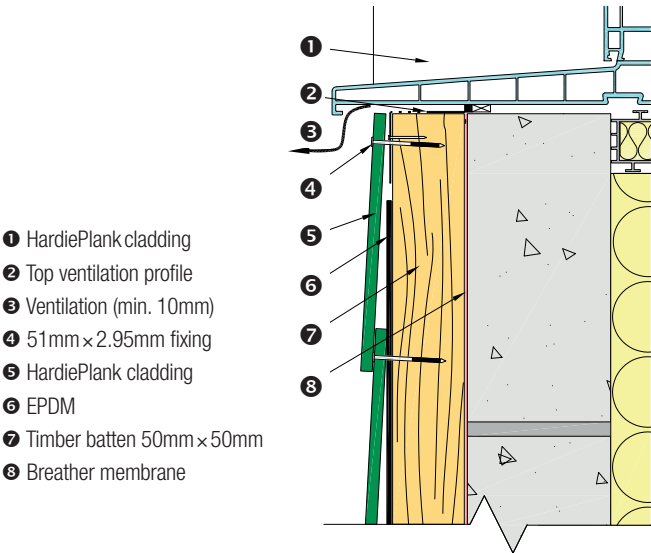


Window Details: With HardieTrim® NT3®




Reveal Detail

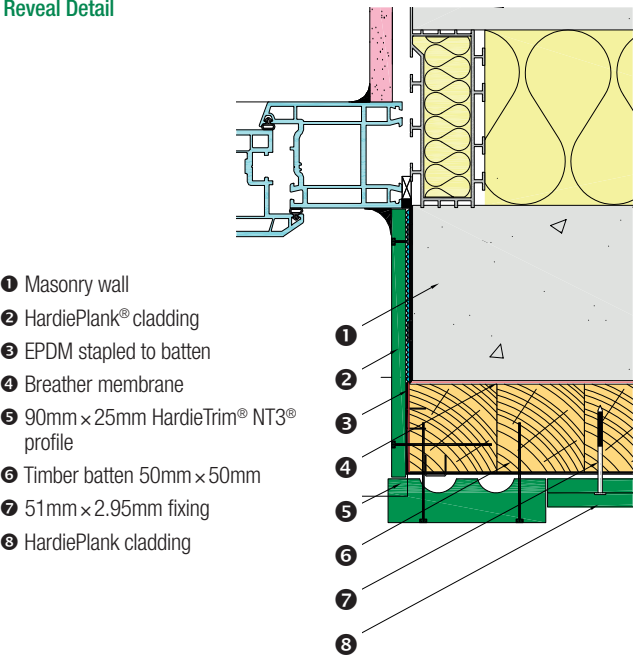


Window Head

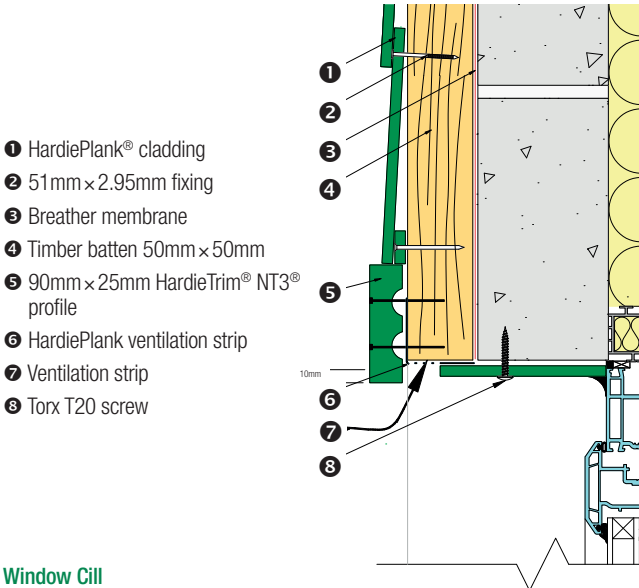

Window Cill

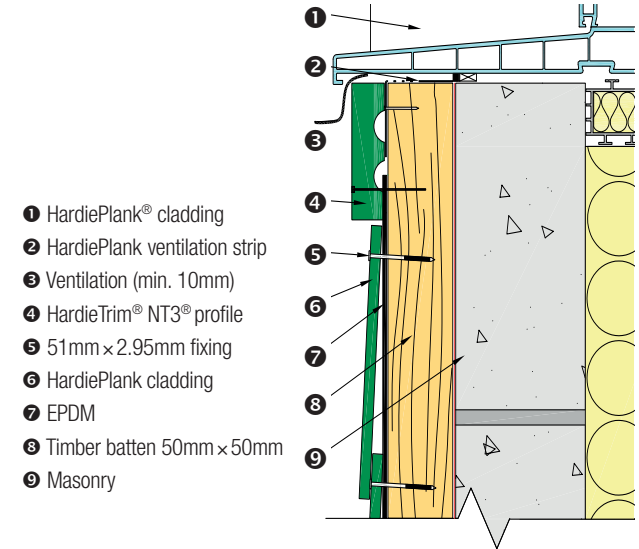


General Arrangement: Vertical Installation

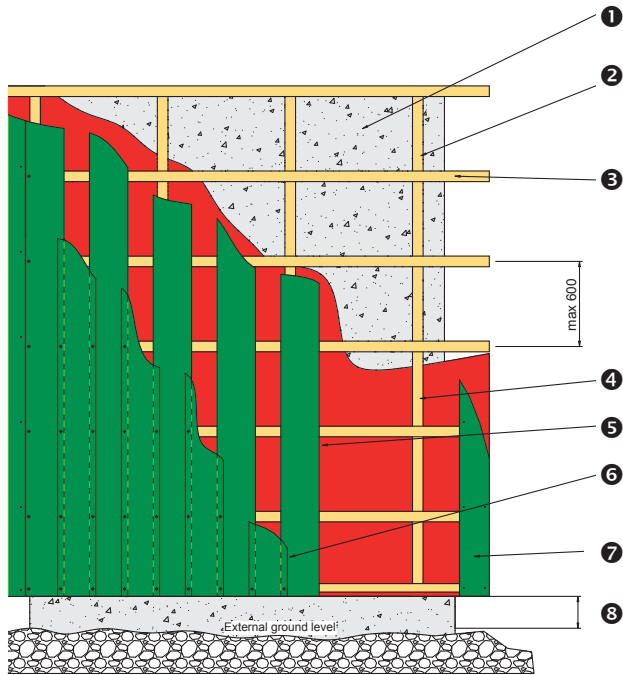

- ① Timber or masonry wall
- ② Vertically installed timber or steel framing battens set off structural wall face
- ③ Horizontally installed timber or steel framing battens
- ④ Install framing to comply with required wind loading (refer to table page 20) and provide sufficient framing for HardieTrim® NT3® profile
- ⑤ Breather membrane under framing
- ⑥ Vertically installed HardiePlank® cladding – 1st layer
- ⑦ Vertically installed HardieTrim NT3 profile
- ⑧ Minimum 150mm as per building regulations

Overlap Detail: Vertical Installation

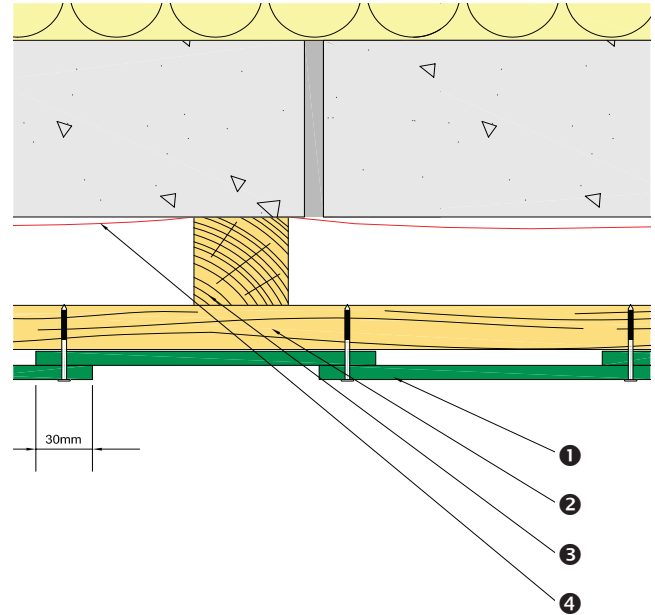

- ① HardiePlank® cladding
- ② 50 × 50mm horizontal timber batten
- ③ 50 × 50mm vertical timber batten
- ④ Breather membrane