



Installation Drawings

General Arrangement: Horizontal Installation

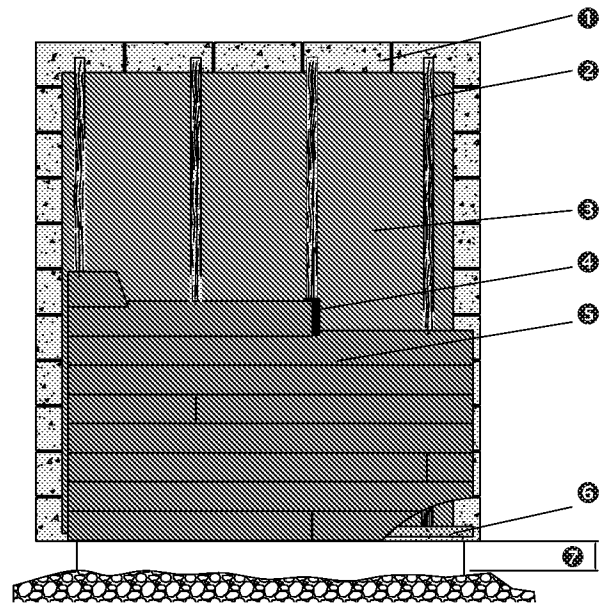


- ① Bricks / Masonry
- ② Vertically installed 50x50mm timber battens
- ③ Breather membrane
- ④ EPDM gasket at joint
- ⑤ HardiePlank® cladding
- ⑥ HardiePlank starter strip with ventilation
- ⑦ 150mm min.

Ground Level-Ventilation Detail

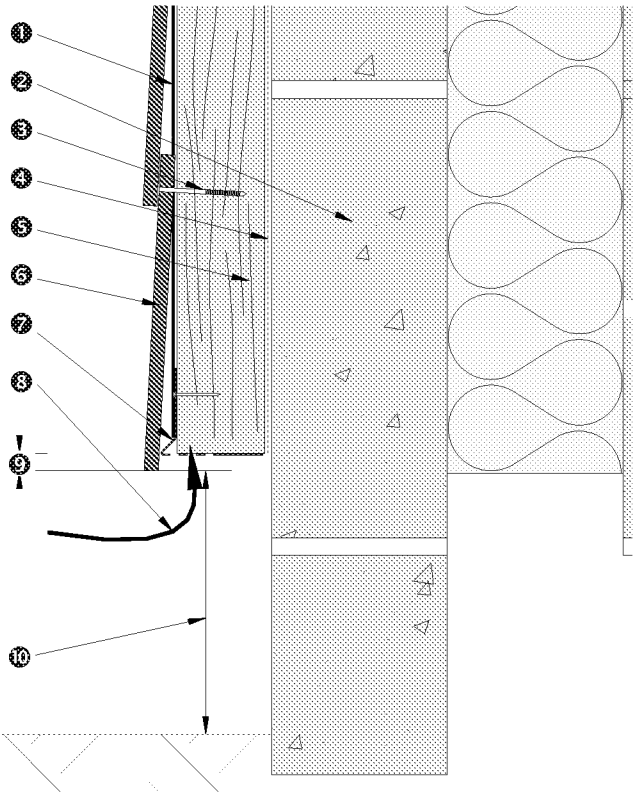

- ① EPDM
- ② Masonry
- ③ 51 x 2.95mm fixing
- ④ Breather membrane
- ⑤ Timber battens 50 x 50mm
- ⑥ HardiePlank® cladding
- ⑦ HardiePlank starter strip with ventilation
- ⑧ Ventilation path
- ⑨ 10mm drip detail
- ⑩ 150mm min.



Top of Cladding-Ventilation Detail

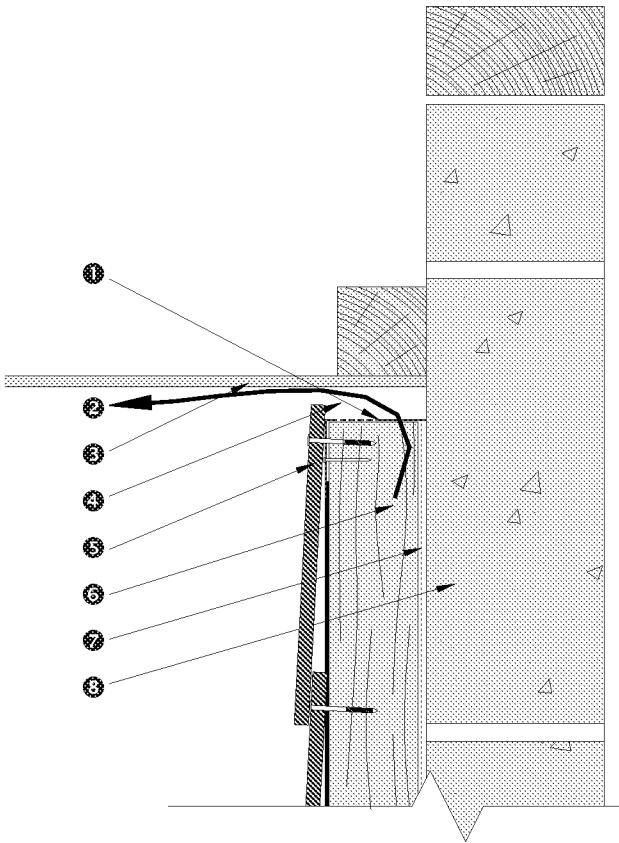

- ① HardiePlank® ventilation strip
- ② Ventilation path
- ③ Soffit board
- ④ 10mm ventilation gap
- ⑤ HardiePlank cladding
- ⑥ 50 x 50mm vertical timber framing batten
- ⑦ Breather membrane
- ⑧ Masonry

External Corner-HardieTrim® NT3®


Internal Corner-HardieTrim® NT3®

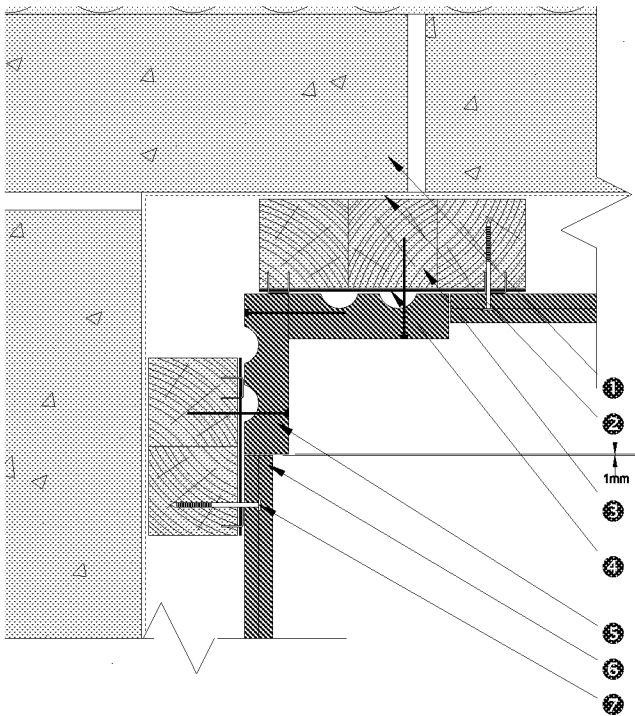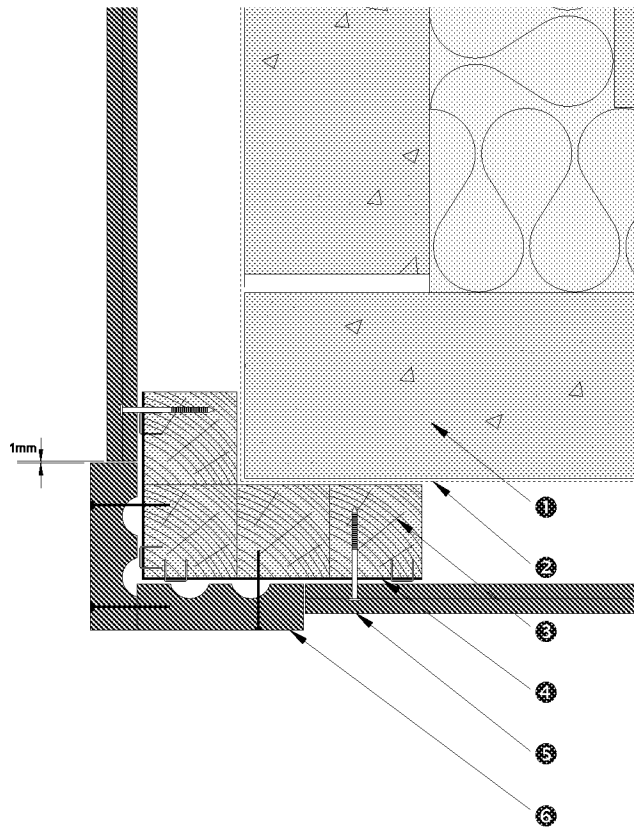

- ① Masonry
- ② Breather membrane
- ③ Timber batten 50 x 50mm
- ④ EPDM
- ⑤ HardiePlank® cladding
- ⑥ HardieTrim® NT3® profile


- ① Masonry
- ② Breather membrane
- ③ Timber battens 50 x 50mm
- ④ EPDM
- ⑤ HardieTrim® NT3® profile
- ⑥ HardiePlank® cladding
- ⑦ 51 x 2.95mm fixing

External Corner-MetalTrim

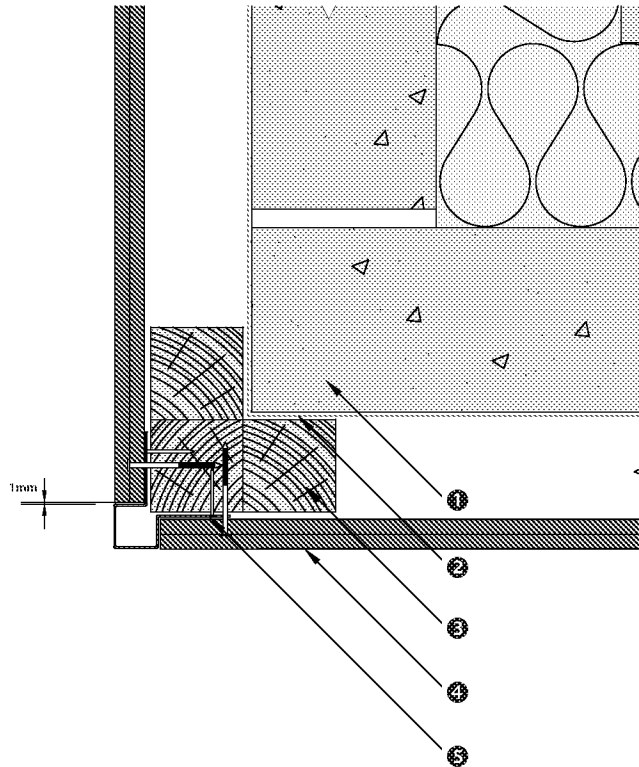


- ① Masonry
- ② Breather membrane
- ③ Timber batten 50 x 50mm
- ④ HardiePlank® cladding
- ⑤ MetalTrim external corner profile

Internal Corner-MetalTrim

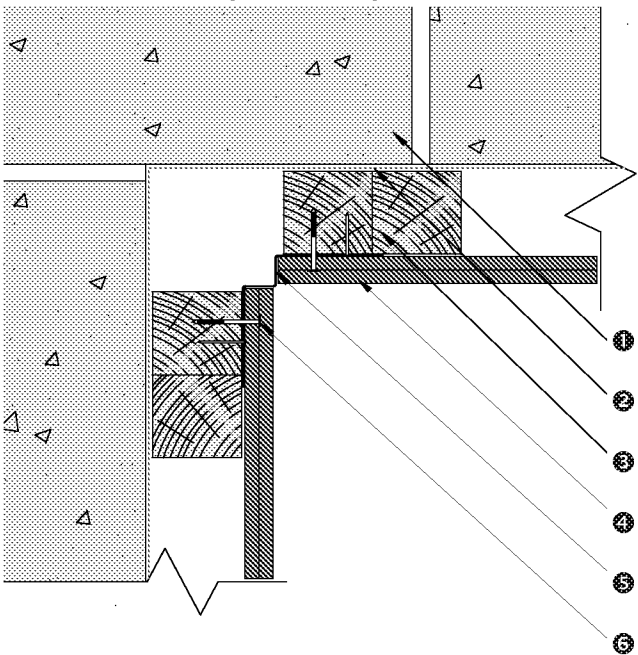


- ① Masonry
- ② Breather membrane
- ③ Timber battens 50 x 50mm
- ④ HardiePlank® cladding
- ⑤ MetalTrim internal corner profile
- ⑥ 51 x 2.95mm fixing

Gables

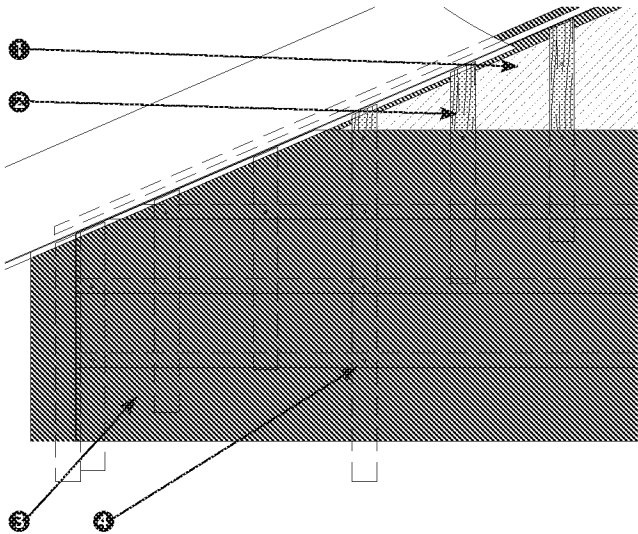


Brick Dado Detail

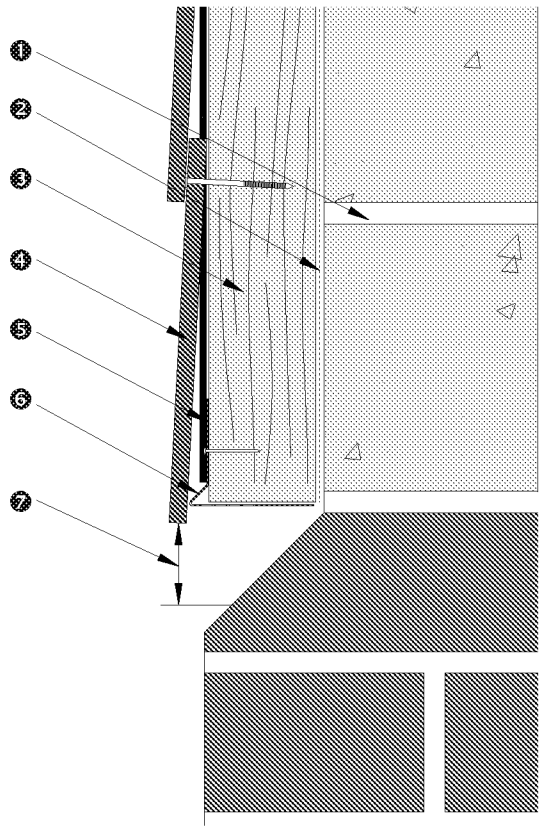

- 1 Breather membrane
- 2 Timber battens 50×50mm, 200mm centres
- 3 HardiePlank® cladding
- 4 50mm fixing nail





- 1 Masonry
- 2 Breather membrane
- 3 Timber battens 50×50mm
- 4 HardiePlank® cladding
- 5 EPDM
- 6 HardiePlank starter strip with ventilation
- 7 10mm drip detail

Expansion Gap

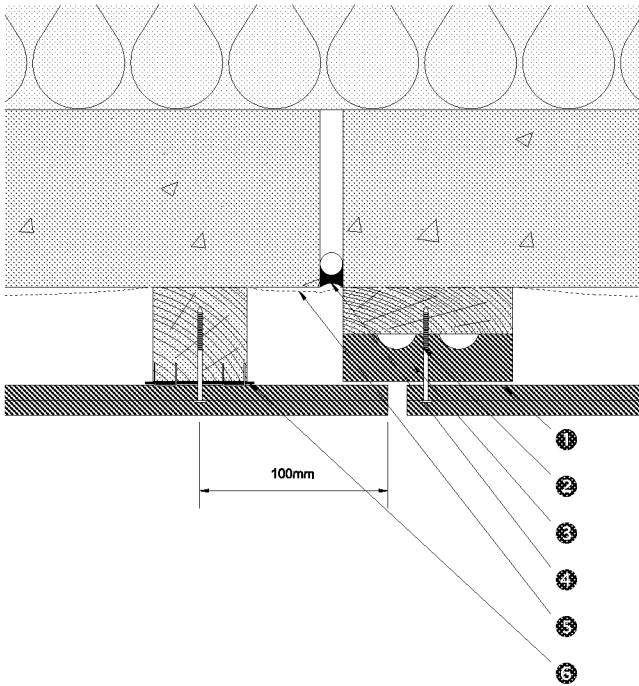

- ① HardiePlank® cladding
- ② 51 x 2.95mm fixing
- ③ HardieTrim® NT3® profile
- ④ Expansion gap
- ⑤ Breather membrane
- ⑥ EPDM

Abutment to Render

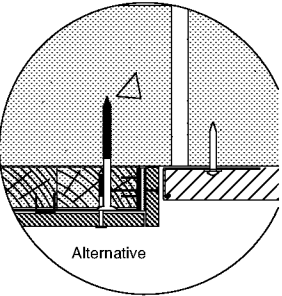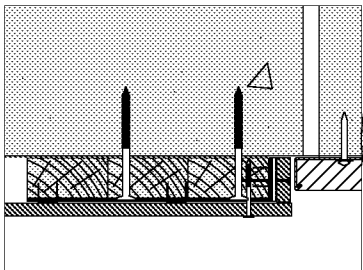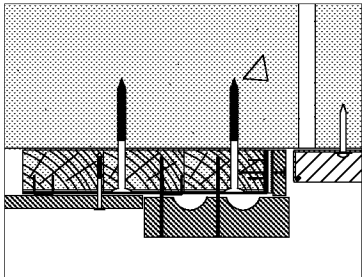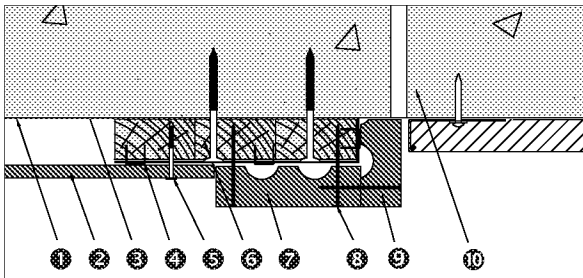


- ① Breather membrane
- ② HardiePlank® cladding
- ③ Concrete block
- ④ EPDM stapled to batten
- ⑤ 51 x 2.95mm fixing
- ⑥ 50 x 25mm timber
- ⑦ 90 x 25mm HardieTrim® NT3® profile
- ⑧ 51mm 16g fixing
- ⑨ HardieTrim NT3 profile cut to fit
- ⑩ Brickwork


Window Details: HardiePlank® On Edge




Reveal Detail

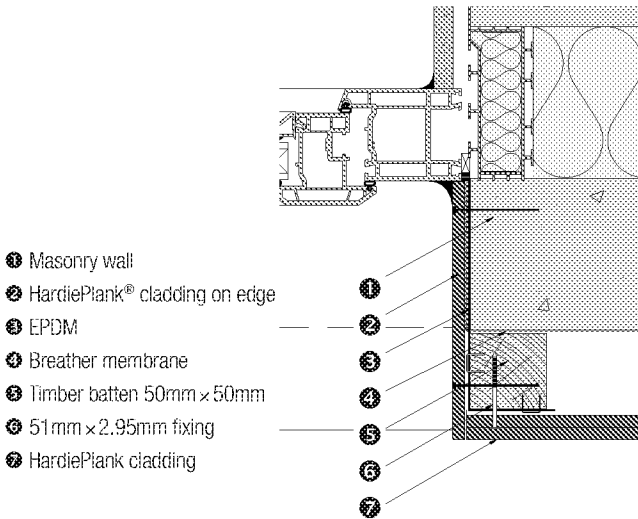

Window Head

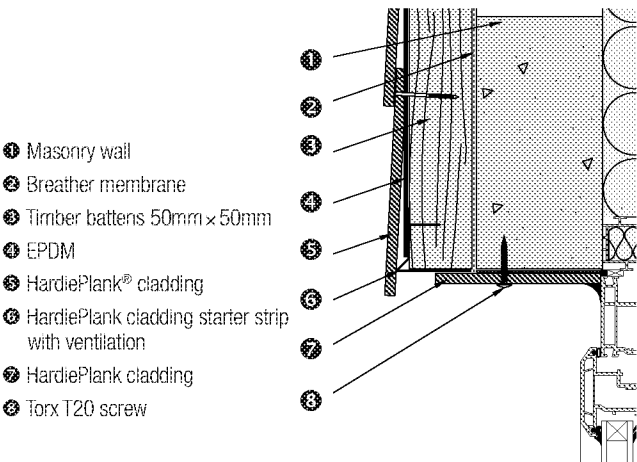


Window Cill

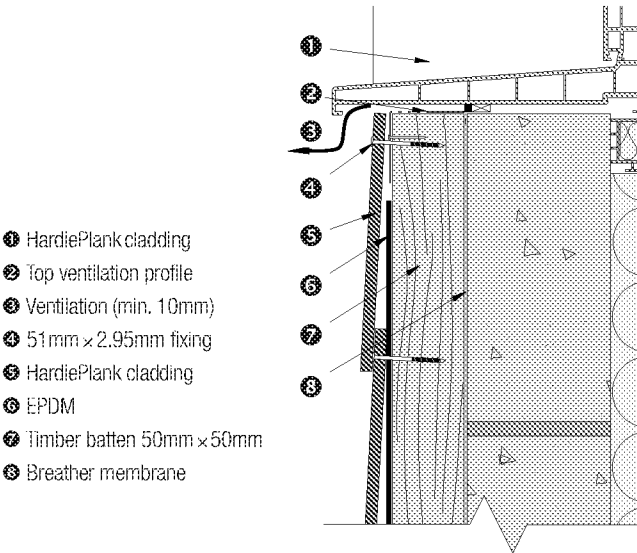


Window Details: With HardieTrim® NT3®




Reveal Detail

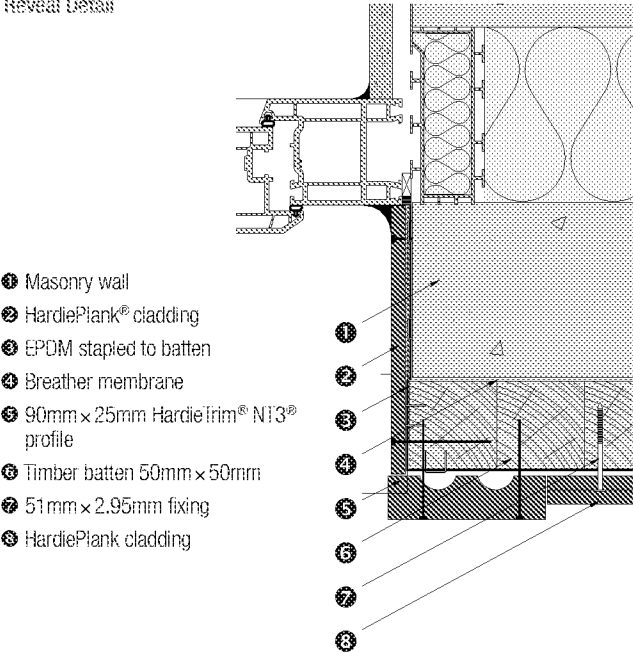


Window Head

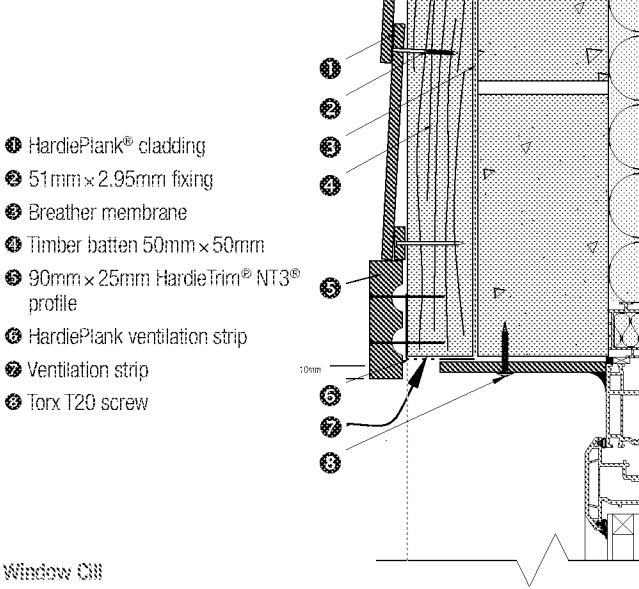

Window Cill

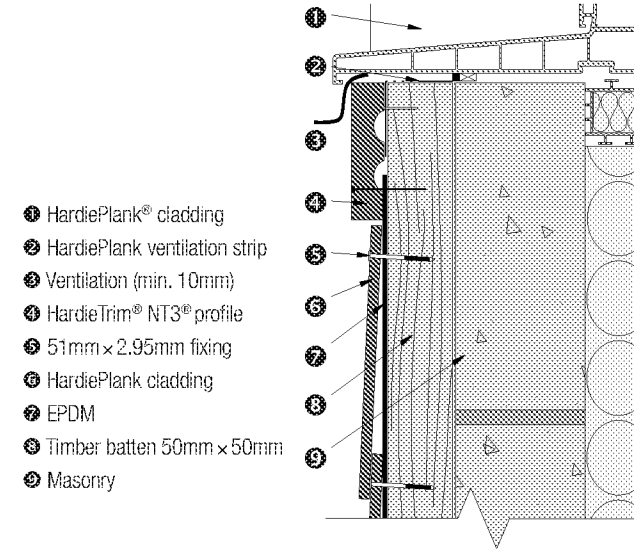


General Arrangement: Vertical Installation

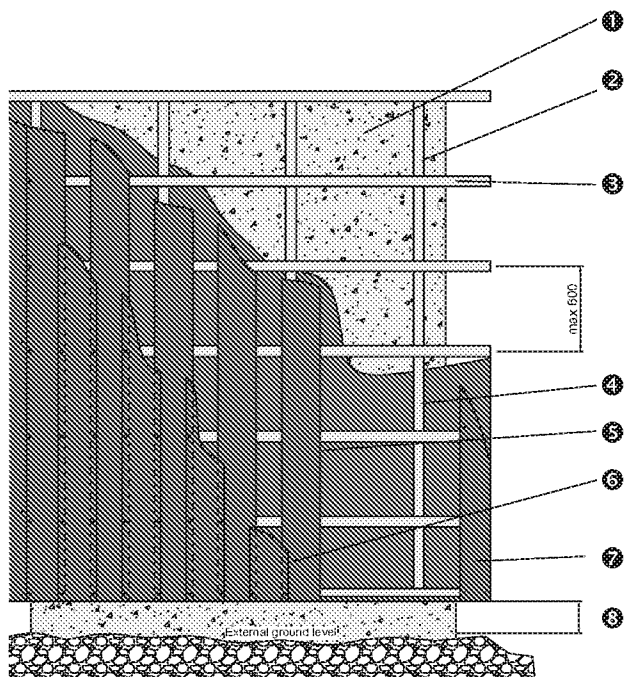

- ① Timber or masonry wall
- ② Vertically installed timber or steel framing battens set off structural wall face
- ③ Horizontally installed timber or steel framing battens
- ④ Install framing to comply with required wind loading (refer to table page 20) and provide sufficient framing for HardieTrim® NT3® profile
- ⑤ Breather membrane under framing
- ⑥ Vertically installed HardiePlank® cladding -- 1st layer
- ⑦ Vertically installed HardieTrim NT3 profile
- ⑧ Minimum 150mm as per building regulations

Overlap Detail: Vertical Installation

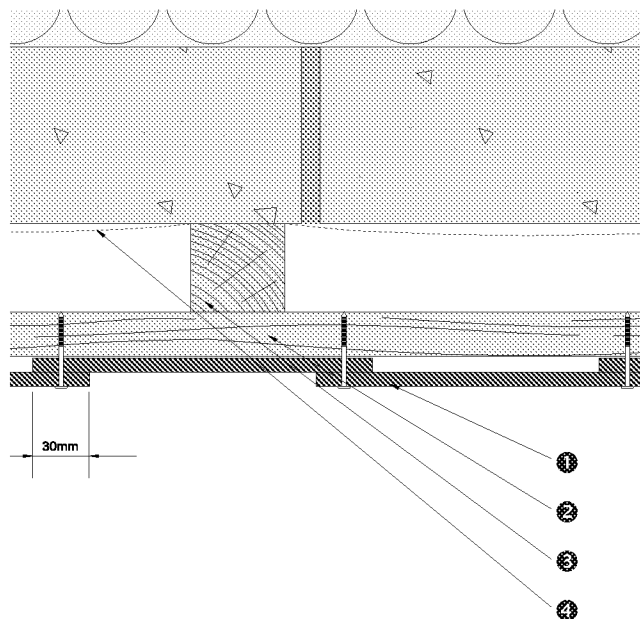

- ① HardiePlank® cladding
- ② 50 x 50mm horizontal timber batten
- ③ 50 x 50mm vertical timber batten
- ④ Breather membrane