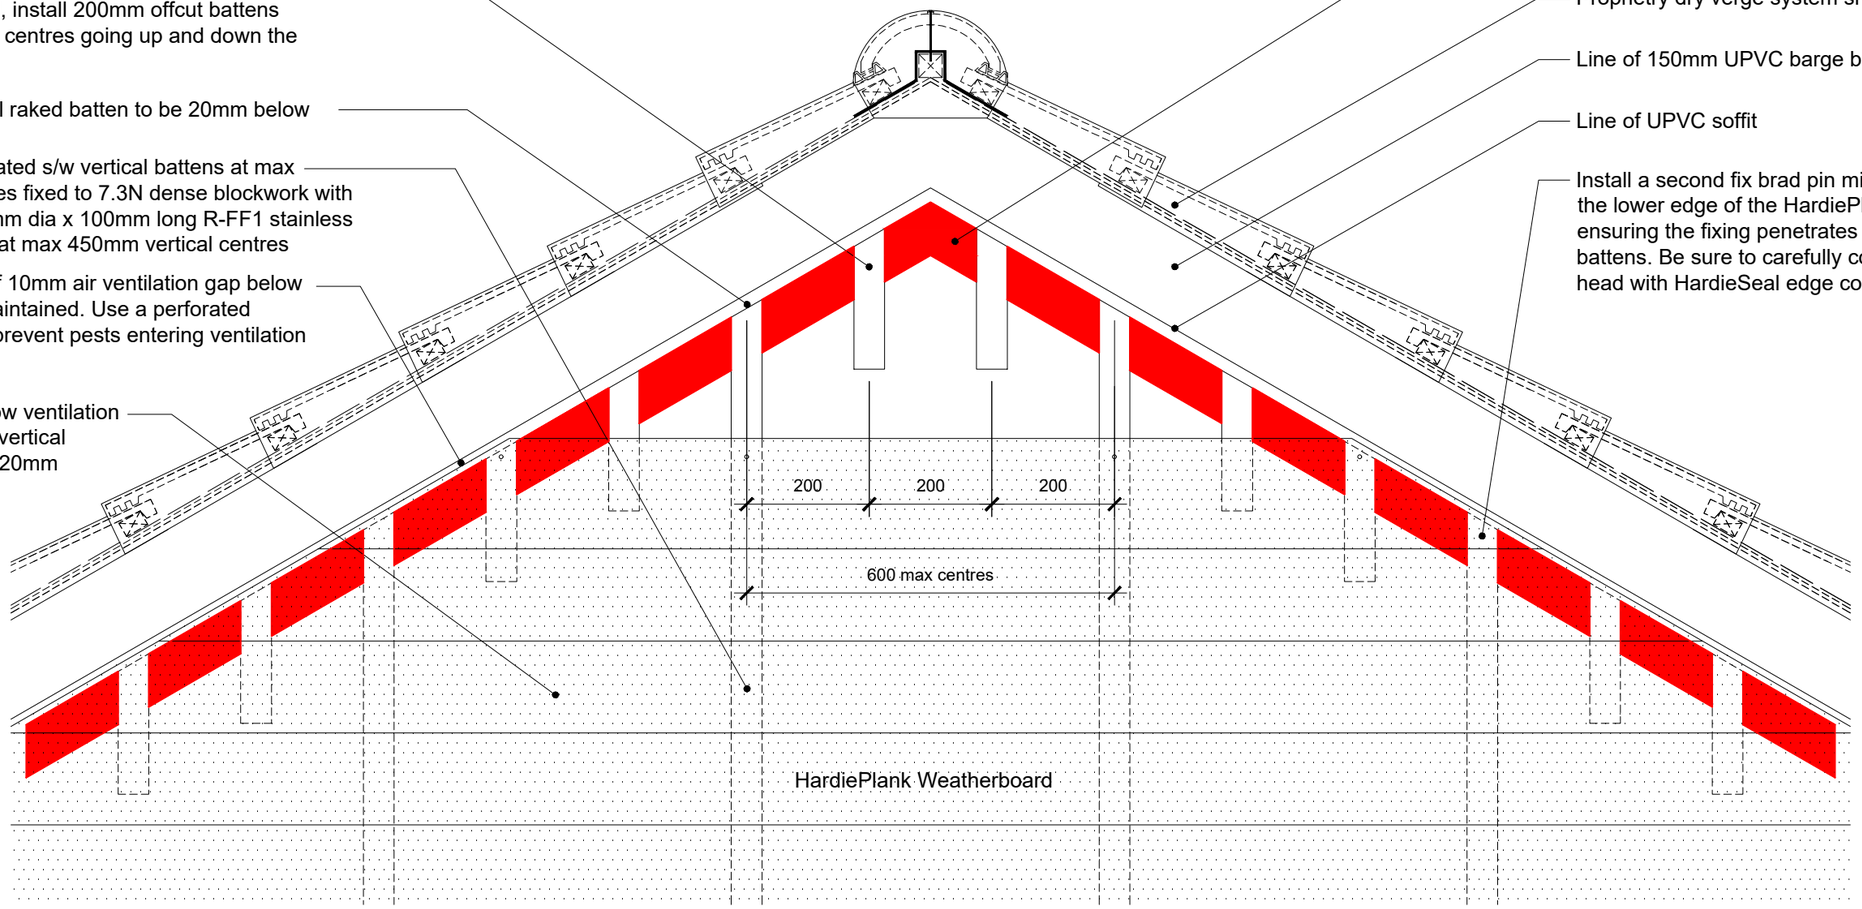

IMPORTANT - DO NOT INSTALL A DIAGONAL BATTEN UNDER SOFFIT AS THIS WILL BLOCK THE PATH OF VENTILATION

TENMAT FF102/50 TO BE FIXED AT MAXIMUM 250MM CENTRES WITH A MINIMUM OF 3 FIXINGS FIXED ALONG CENTRE LINE OF FIRE BARRIER WITH LABEL SIDE FACING OUTWARDS INTO CAVITY WITH LENGTHS TIGHTLY ABUTTED TOGETHER WITH NO GAPS. ENSURE THERE ARE NO GAPS BETWEEN ENDS OF TENMAT FF102/50 AND ADJACENT TIMBER BATTEN.

EXTERNAL REFERENCE :

DAVID WILSON HOMES

BARRATT DEVELOPMENTS PLC

Date:

Rev: Description:

Brand: **BARRATT / DAVID WILSON HOMES**

Range: **-5 / 2010 & -7 / 2016**

Title: **HardiePlank Gable Elevation - Barge / Soffit**

Detail No: **DB-SD02-037**

Drawn: **GDT** Checked: **GDT** Scale: **1:10** Date: **May 21**