




M.O.
ATKINS

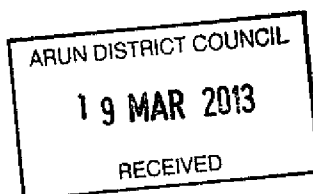

Atkins Limited
Anglo St James House
39A Southgate Street
Winchester
Hampshire SO23 9EH

Telephone +44 (0)1962 858688
Fax +44 (0)1962 810296

winchester.enquiries@atkinsglobal.com
www.atkinsglobal.com

Planning and Development Services
Arun Civic Centre
Maltravers Road
Littlehampton
West Sussex
BN17 5LF

Your Ref: M/7/13

Our Ref: PLAN-002515

18/03/2013

Proposal: Roof extension to provide additional living accommodation and balcony.
Site: 2 Alleyne Way, Bognor Regis, West Sussex PO22 6JZ.
M/7/13


Dear Sir,

Thank you for your letter of 20/02/2013.

Southern Water has no objection to the above proposal.

Please find the attached practical measures for surface water disposal from the site.

Yours faithfully,


Developer Services

Practical measures to reduce the potential adverse impacts of development

Reasons	Practical measures
Adequate and sustainable surface water drainage.	No surface water connections to the wastewater system. (See part H of the Building Regulations)
Guard against further groundwater infiltration into the foul drains or sewers serving the development.	The use of fusion jointed MDPE pipes can prevent groundwater infiltration and require a minimum of maintenance. The use of mass concrete surrounds to inspection chambers and manholes can prevent infiltration and require a minimum of maintenance
Guard against surface floodwaters entering the foul system serving the development.	Overland surface water flow routes should be provided for flows greater than those for which pipelines and culverts have been designed. Wherever possible, foul sewer routes, manhole covers, sink waste gullies, etc. should avoid overland surface water flow routes and any areas where surface water ponding may occur. Failing that they should be sealed against potential surface water inflows. Any sink waste gullies in areas of potential surface water inundation should be sealed or defended by raised brickwork or similar Bolt down sealed inspection chamber and manholes covers should be used in areas of potential surface water inundation. Raising the level of the development above the highways which serve it can protect buildings and their drainage systems from potential surface water inundation. However, care should be taken at local low spots in the highway where overland surface water flows may gather and overflow onto properties.
Protect the properties from foul flooding or unusable sanitation should the public sewerage system surcharge.	Part H of the Building Regulations contains suitable practical measures. However, the provision of an external gully is inappropriate where there is a risk of surface water flooding. In these circumstances, non-return valves are more appropriate. Dirgo or similar non-return air valves are now commonly fitted to soil vent pipes thereby allowing them to allow them to vent within the building. This practice can lead to problems with bubbling WCs, the blow out of U bend traps and odour within buildings when the sewerage system surcharges. The use of traditional external vent pipes without air valves can prevent this.